


How to Immobilise/mobilise or door lock/unlock a vehicle?

Please follow this guide first - [How to view a vehicle on the map?](#)

Note - This feature requires additional hardware to be installed in your vehicle.

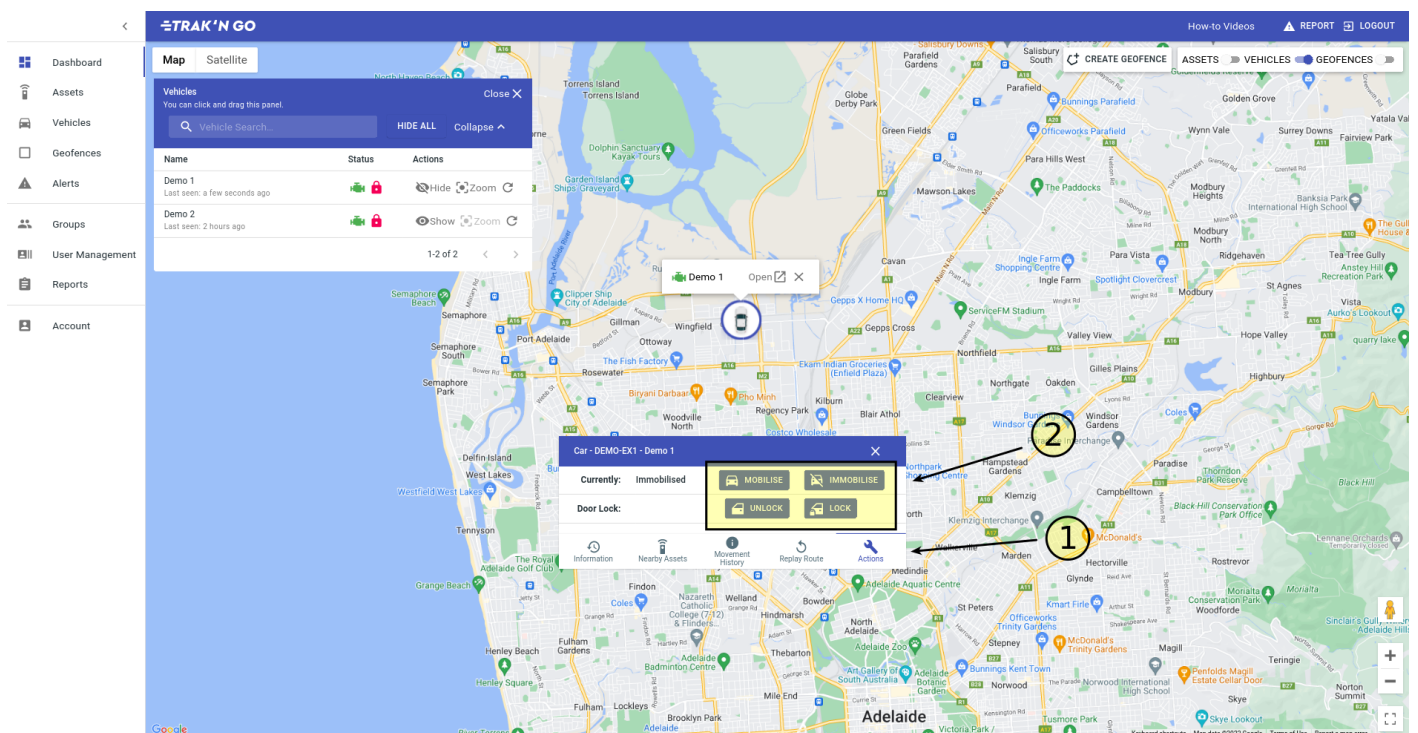

1. Click on the Actions tab.
2. You will see four buttons. Click on the appropriate button for what you are after.

Revision #4

Created 5 August 2022 05:39:50 by Jatin Kumar

Updated 10 August 2022 05:19:17 by Jatin Kumar