

# Alerts

- [What are alerts?](#)
- [How to create a alert?](#)
- [How to assign vehicles to an alert?](#)
- [How to delete an alert?](#)
- [How to add an alert to a group?](#)
- [How to edit an alert?](#)
- [How to remove one vehicle from an alert?](#)

# What are alerts?

There are seven alerts in Trakngo.

Speed alert: This will alert you if a vehicle goes above a set speed.

Service alert: This will alert you if a vehicle needs to be serviced.

Temperature alert\*: This will alert you if the temperature of a vehicle between goes outside of a set range. Note: this requires a temperature probe to be installed in your vehicle.

Tamper alert\*: This will alert you if the tracker was unplugged from your vehicle.


Stolen alert: This will alert you of any activity on a vehicle. It cannot tell you whether your vehicle is being stolen. Only assign vehicles that you know to be stolen.

Towing alert: This will alert you if a vehicle is being towed.

Offline alert: This will alert you if a vehicle was offline for more than a set number of hours.


\* : Appropriate tracker and/or accessory required.

# How to create a alert?

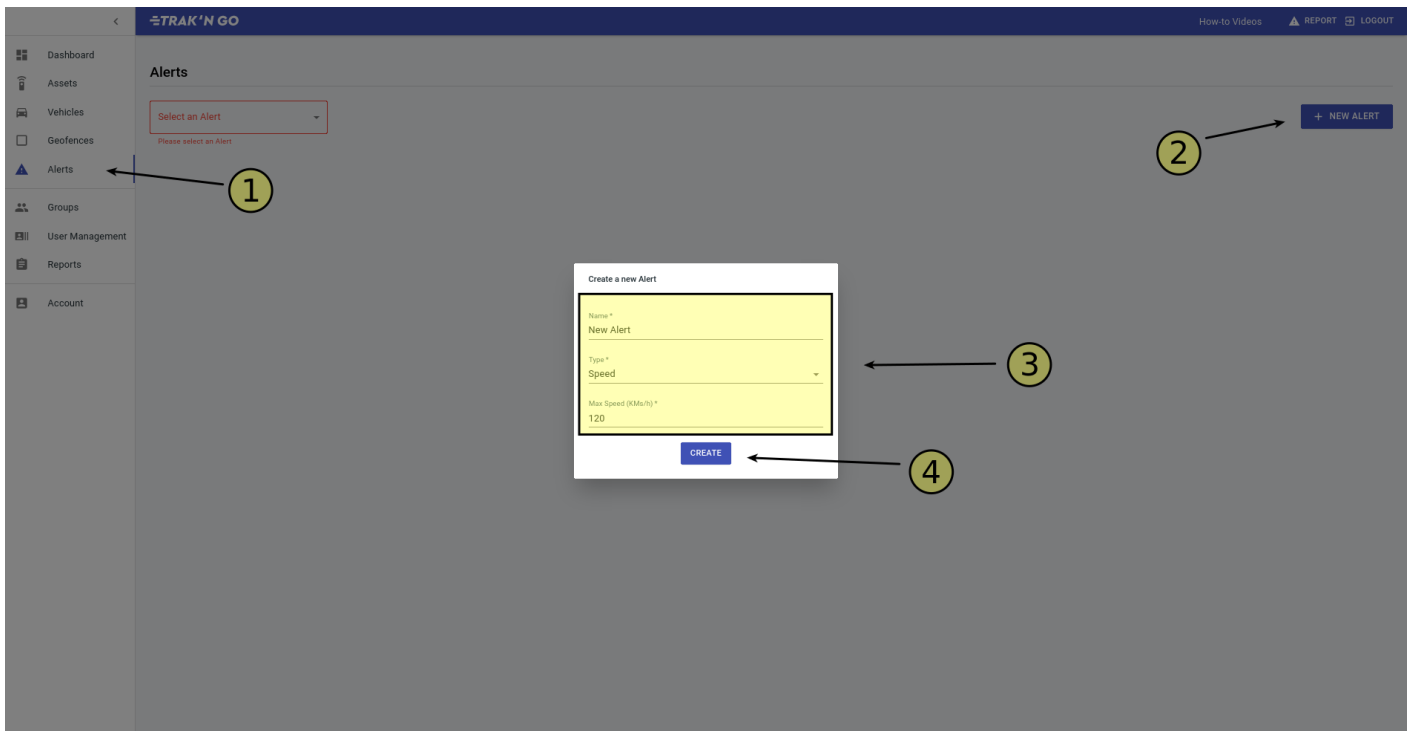


1. Make sure you are on the Alerts page.
2. Click NEW ALERT button.
3. Fill in the details.
4. Click CREATE to finish creating the alert.

# How to assign vehicles to an alert?

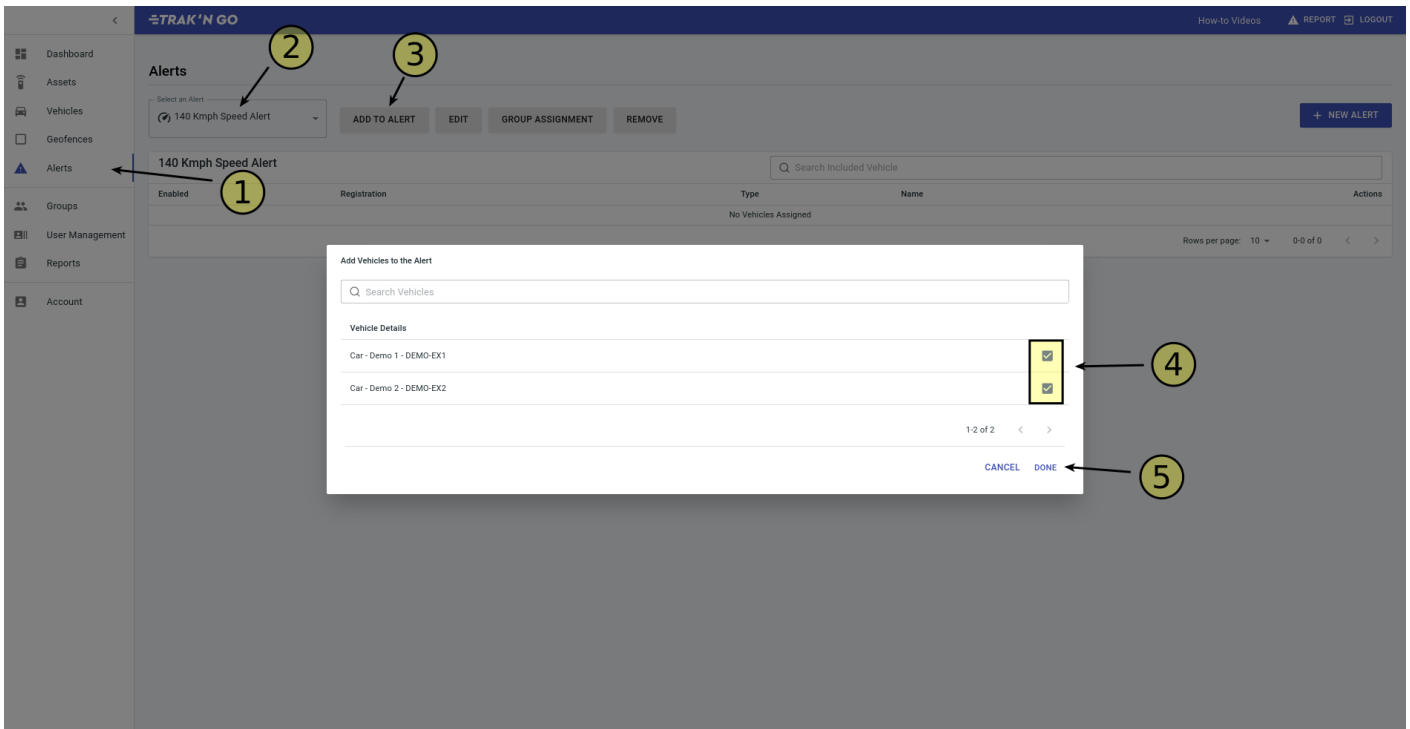


1. Make sure you are on the Alerts page.
2. Select an alert from the drop down to open it.
3. Click ADD TO ALERT button.
4. Select the vehicles that you want to add.
5. Click DONE to save the changes.

# How to delete an alert?

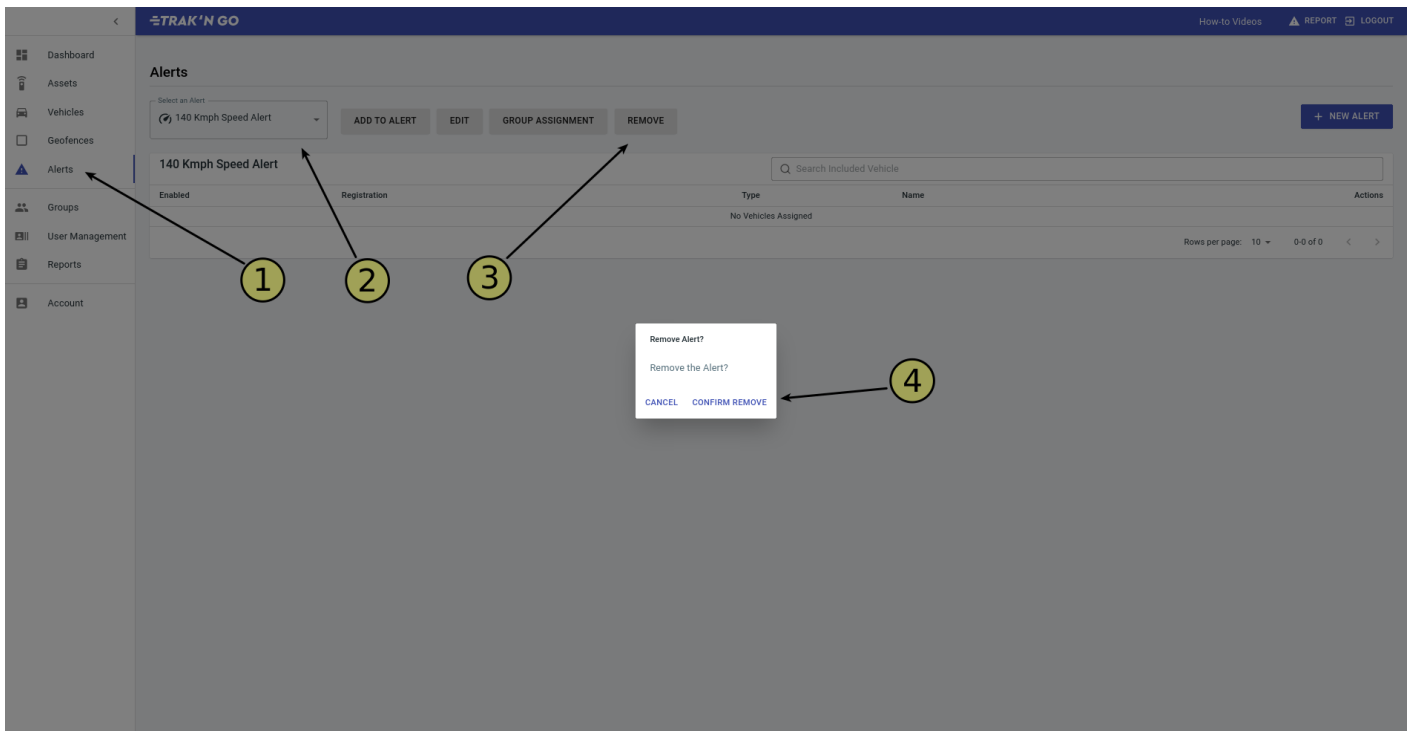

1. Make sure you are on the Alerts page.
2. Select an alert from the drop down to open it.
3. Click REMOVE button.
4. Click CONFIRM REMOVE to delete it.

# How to add an alert to a group?

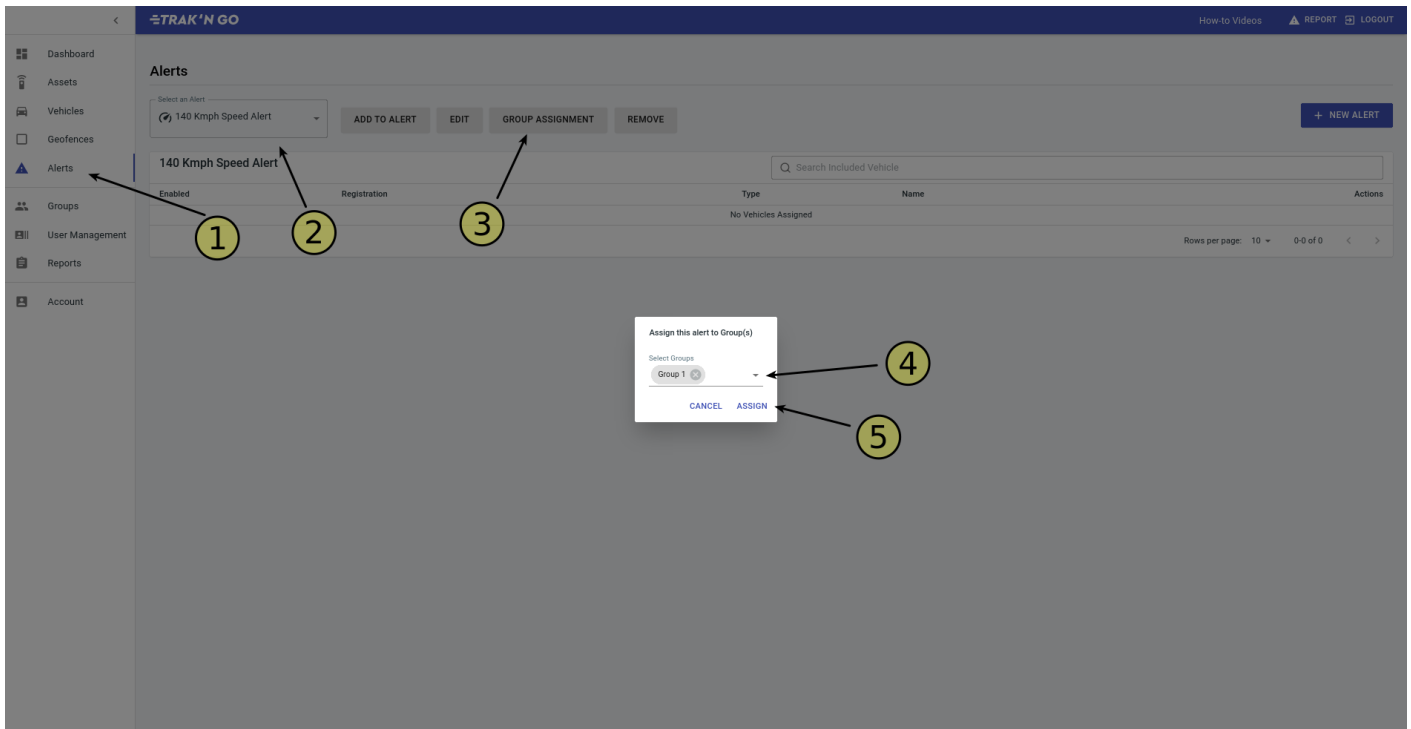

1. Make sure you are on the Alerts page.
2. Select an Alert from the drop down to open it.
3. Click GROUP ASSIGNMENT button.
4. Select the groups that you want the alert to be in.
5. Click ASSIGN to save the changes.

# How to edit an alert?

The screenshot shows the TRAK'N GO interface. On the left is a sidebar with navigation options: Dashboard, Assets, Vehicles, Geofences, Alerts, Groups, User Management, Reports, and Account. The main area is titled 'Alerts' and contains a dropdown menu currently showing '140 Kmph Speed Alert'. Below this is a table with columns: Enabled, Registration, Type, Name, and Actions. The table is currently empty, showing 'No Vehicles Assigned'. Above the table are buttons for 'ADD TO ALERT', 'EDIT', 'GROUP ASSIGNMENT', and 'REMOVE'. A '+ NEW ALERT' button is in the top right. An 'Edit an Alert' modal is open in the center, with fields for 'Name \*' (140 Kmph Speed Alert), 'Type \*' (Speed), and 'Max Speed (Kilohrs) \*' (140). A 'SAVE' button is at the bottom of the modal. Numbered callouts indicate the steps: 1 points to the Alerts tab in the sidebar; 2 points to the alert dropdown; 3 points to the EDIT button; 4 points to the modal fields; and 5 points to the SAVE button.

1. Make sure you are on the Alerts page.
2. Select an Alert from the drop down to open it.
3. Click the Edit Button.
4. Make the desired changes.
5. Click SAVE to save the changes.

How to remove one vehicle  
from an alert?