
How to immobilise a vehicle from the vehicles page?

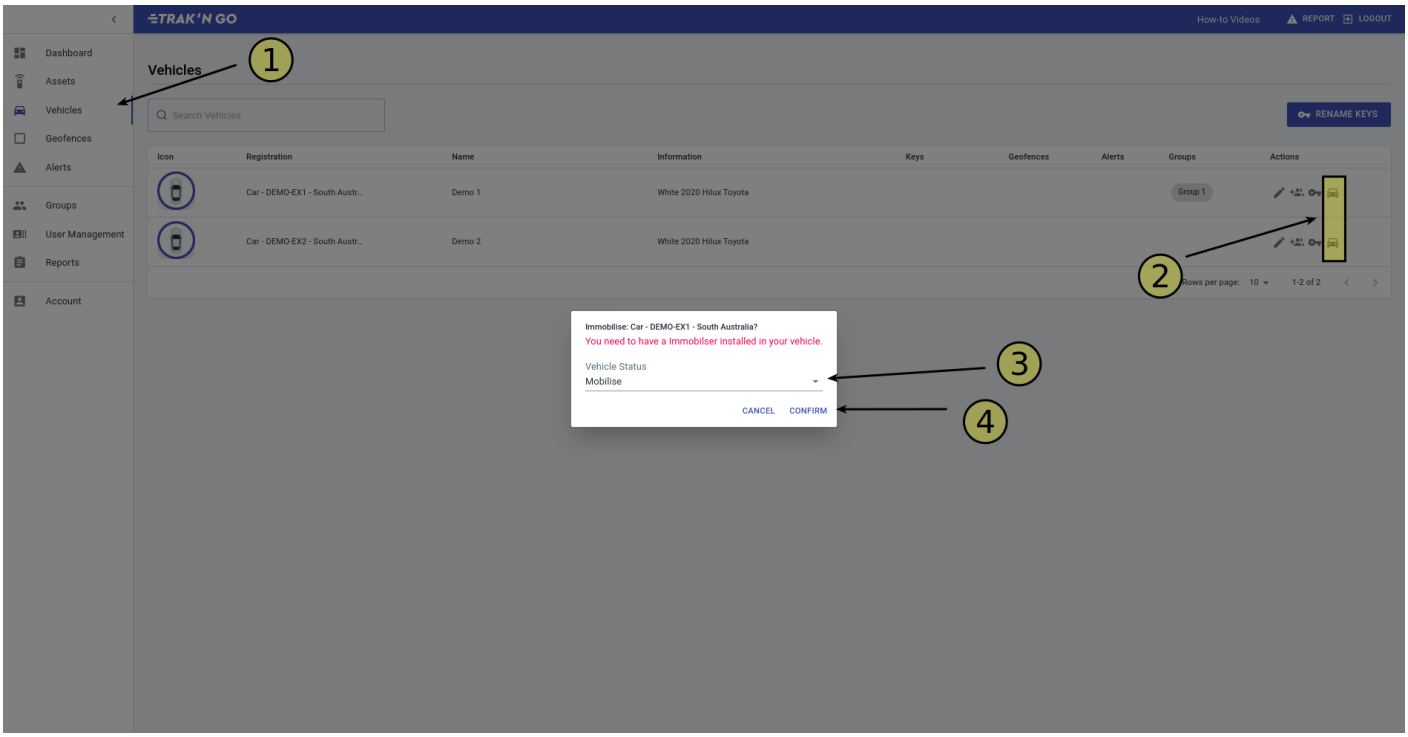

1. Make sure you are on the Vehicles page.
2. Click the car icon for the vehicle that you want to immmobilise/mobilise.
3. Select from immobilise or mobilise.
4. Click CONFIRM to send the command to the tracker.

Revision #2
Created 5 August 2022 05:42:33 by Jatin Kumar
Updated 12 August 2022 00:11:48 by Jatin Kumar